

SONIQ SONIQ Lite

Dentium
For Dentists By Dentists

구성품

한국어

※SONIQ Lite는 '레귤러 헤드(3PCS)'; '여행용 케이스'가 포함되지 않습니다.



본체

무선 충전 거치대

사용자 매뉴얼

1

제품구조

한국어



칫솔 헤드

전원/작동 버튼

강도 표시 LED

충전 표시 LED

무선 충전 거치대

2

제품기능

한국어



칫솔 헤드 교체



- 왼쪽 그림과 같은 방법으로 칫솔 헤드를 장착할 수 있습니다. (칫솔 헤드가 앞쪽으로 향하게 장착하여 주십시오. 방향이 맞지 않는 상태로 무리하게 장착하면 제품이 손상될 수 있습니다.)
- 본 제품의 칫솔 헤드는 패키지에 동봉되어 있습니다.
- 칫솔 헤드는 3개월마다 교체하여 주십시오. 3개월이 지나지 않더라도, 칫솔모의 형태가 변형되었다면 칫솔 헤드를 교체하십시오. (칫솔 헤드는 별매품으로 구매 할 수 있습니다.)
- 다른 제품의 칫솔 헤드는 호환이 되지 않습니다. 타제품의 무리한 칫솔 헤드 장착은 고장의 원인이 될 수 있습니다.
- 칫솔 헤드 결합 후 본체와 칫솔 헤드 사이에 1mm 정도 틈이 있습니다. 이는 칫솔의 스윙을 위한 것으로 정상입니다. (틈을 없애려고 과도하게 누를 시 제품 고장의 원인이 될 수 있습니다.)


3

사용방법

한국어

- 양치질 준비**
칫솔모에 치약을 적당량 도포 합니다. 본 제품은 치약 튜 방지 기능이 탑재되어 있어 3초동안 점차 세기가 강해집니다. 3초 내에 칫솔질을 시작하십시오.
- 전원ON, 강도조절**
전원버튼을 짧게 눌러 전원을 켭니다. 전원이 켜진 상태에서 다시 전원버튼을 짧게 눌러 강도를 변경하며 사용자에게 맞는 강도로 양치질을 시작 하십시오.
- 사용, 전원 OFF**
양치질은 2분 정도 하는 것을 권장 드립니다. 2분간 양치질을 하면 자동으로 전원이 꺼집니다. 양치질 도중 전원을 끄고 싶다면 전원버튼을 1초 이상 길게 누르십시오.
- 세척 및 건조**
사용 후 칫솔모를 흐르는 물에 잘 씻어주고, 자연 건조해주십시오. 사용 후에는 건조하고 선선한 곳에 보관하여 주십시오.

스마트 2분 타이머 · 30초 구간 알림

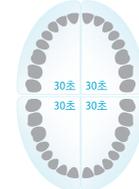

- 본 제품에는 양치질 시간을 가이드 하는 타이머 기능이 탑재되어 있습니다.
- 양치질은 2분간 진행되며 2분이 지나면 자동으로 전원이 꺼집니다.
- 구강을 4구역으로 나누어 30초씩 골고루 양치질을 할 수 있도록 30초가 지나면 잠시 정지하여 신호를 줍니다. 진동이 울릴 때마다 구역을 변경하여 골고루 양치질 하십시오.

4



Component

English

※SONIQ Lite package is not include 'Regular head(3PCS)' and 'Travel Case'.



Toothbrush product

Wireless charging cradle

User manual

1

Product structure

English



Toothbrush head

Power/Action button

Mode indicator LED


Charging indicator LED

Wireless charging cradle

2

Product function

English

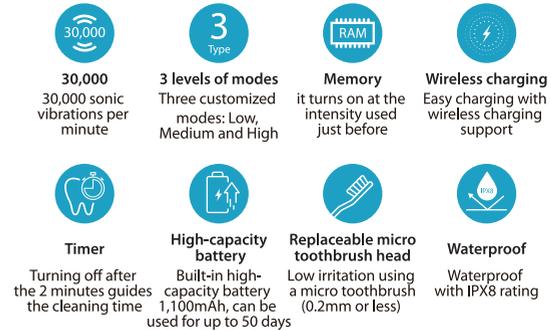

Toothbrush head replacement



- The toothbrush head can be mounted in the same way as the picture on the left. (Please install the toothbrush head facing forward. Forcibly installing the toothbrush in the wrong direction may damage the product.)
- The toothbrush head is enclosed in the package.
- Replace the toothbrush head every 3 months. Even after 3 months, if the shape of the bristles has changed, replace the toothbrush head. (The toothbrush head could be purchased separately.)
- The toothbrush heads of other products are not compatible. Misuse of toothbrush heads of other products may cause malfunction.

3

English

- After combining the toothbrush head, there is a gap of about 1mm between the body and the toothbrush head. This gap is a space for the normal work of the brush head. (If you press excessively to close the gap, it may cause the product failure.)

Usage Method

- Prepare to brush your teeth**
Take a small amount of toothpaste on the brush head. Vibration increases gradually for 3 seconds and this prevents the toothpaste on the brush splashed. Put it into the mouth within 3 seconds.
- Power ON, mode control**
Briefly press the power button to turn on. While the power is on, briefly press the power button again to change the mode and start brushing on the mode you prefer.
- Use, power OFF**
We recommend brushing your teeth for about 2 minutes. The power turns off automatically after 2 minutes. If you want to turn off the power while brushing your teeth, press and hold the power button for more than 1 second.
- Wash and dry**
After use, rinse the toothbrush head under running water and let it dry naturally. After use, store in a dry and cool place.


Smart 2 minutes Timer: 30 Seconds Interval



- This product is equipped with a timer to guide the brushing time.
- Brushing your teeth for 2 minutes and turns off automatically.
- Brush your teeth in each zone of the oral cavity and change the zone when it vibrates every 30 seconds.

4

강도조절 한국어

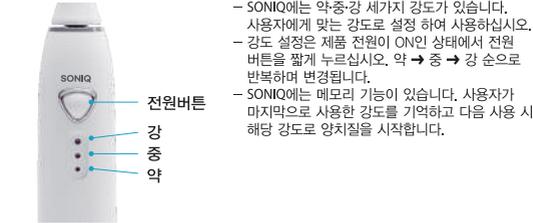


칫솔 세척 및 보관

칫솔 헤드 세척 및 보관 방법



- 사용 후 즉시 칫솔 헤드는 흐르는 물에 깨끗하게 세척하고 건조하여 주십시오.
- 칫솔에 치약이 남아있거나 건조가 제대로 되지 않으면 세균번식의 원인이 될 수 있습니다.
- 세척 및 건조가 끝난 후에는 건조하고, 서늘한 곳에 보관 하여 주십시오.


칫솔 본체 세척 및 보관 방법

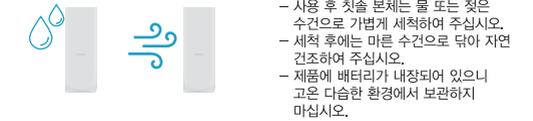

- 사용 후 칫솔 본체는 물 또는 젖은 수건으로 가볍게 세척하여 주십시오.
- 세척 후에는 다른 수건으로 닦아 자연 건조하여 주십시오.
- 제품에 배터리가 내장되어 있으니 고온 다습한 환경에서 보관하지 마십시오.

5	6	7	8	9
---	---	---	---	---

Intensy control English

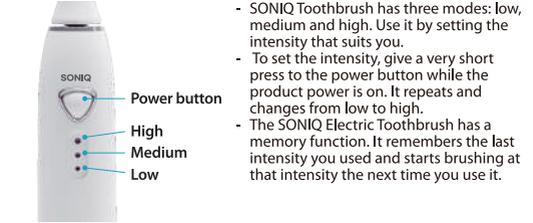

- SONIQ Toothbrush has three modes: low, medium and high. Use it by setting the intensity that suits you.
- To set the intensity, give a very short press to the power button while the product power is on. It repeats and changes from low to high.
- The SONIQ Electric Toothbrush has a memory function. It remembers the last intensity you used and starts brushing at that intensity the next time you use it.


Toothbrush cleaning and storage

How to clean and store your toothbrush head



- Immediately after use, clean the toothbrush head under running water and dry it.
- If there is toothpaste left on the toothbrush or if it is not dried properly, it may cause bacterial growth.
- After washing and drying, store in a dry, cool place.


Toothbrush cleaning and storage



- After use, lightly wash the toothbrush body with water or a wet towel.
- After washing, wipe it with a dry towel and dry it naturally.
- The product has a built-in battery, so do not store it in an environment with temperature and humidity.

5	6	7	8	9
---	---	---	---	---

충전 한국어

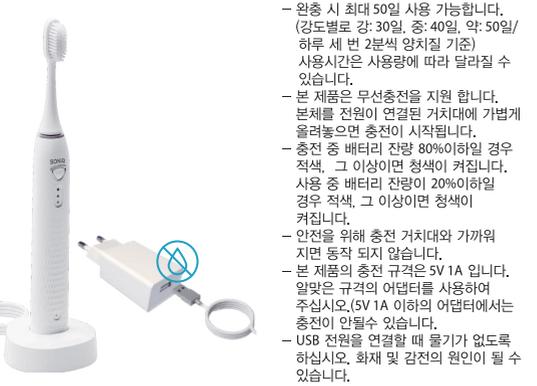

A/S 및 유지 보수

A/S

본 제품은 6개월간 무상 A/S를 지원합니다. 6개월이 지난 후에는 유상으로 전환됩니다. 판매원 또는 제조사에 A/S를 문의하여 주십시오. (단, 무상 A/S 기간에도 사용자의 과실로 인한 사유라면 유상 A/S로 전환됩니다.)

폐기

본 제품에는 배터리 및 전자부품이 내장되어 있습니다. 배터리 및 전자제품을 지정된 장소에 폐기하지 않으면 환경오염의 원인이 될 수 있으므로 지정된 수거함에 폐기하여 주십시오.



5	6	7	8	9
---	---	---	---	---

Charging English



- It can be used for up to 50 days when fully charged. (By intensity: high: 30 days, medium: 40 days, low: 50 days/ based on brushing your teeth for 2 minutes three times a day) The time may vary depending on user.
- This product has wireless charger. Gently place the main body on the cradle connected to the power source to start charging.
- The light is red if the battery is less than 80%, blue if the battery level is higher than 80% when charging. While in use, the light turns redy when the battery is less than 20%, blue if the battery is higher than 80%.
- The toothbrush doesn't work close to the charging cradle for safety.
- The charging standard of this product is 5V 1A. Please use an adapter of the appropriate standard.(Charging may not be possible with an adapter less 5V 1A.)
- When connecting the USB power source, keep it dry. It may cause fire or electric shock.

Warranty and support

Warranty

This product warrants for 6 months. After 6 months, costs will be charged. Please contact the salesperson or manufacturer for warranty. (However, even during the warranty period, defects due to the user's negligence, it will void this warranty.)

주의사항 한국어

사용자 주의사항

- 사용방법 및 주의사항을 충분히 숙지 한 뒤 사용하십시오.
- 최근 잇몸 수술을 받았거나 잇몸이 심하게 부어있는 경우에는 전문의와 상의 후 사용하여 주십시오.
- 칫솔 사용 후 잇몸이 심하게 아프거나 구강 내 불편함이 생길 경우 사용을 즉시 중단하고 전문의와 상의 하십시오.
- 어린이가 가지고 놀지 못하게 하십시오. 전자기기 사용이 용이하지 않은 성인이나 13세 미만 어린이가 사용할 경우에는 보호자와 함께 사용하여 주십시오.
- 3세 미만의 어린이의 손이 닿지 않는 곳에 보관하여 주십시오.
- 칫솔을 너무 세게 밀어 사용하지 마십시오. 잇몸과 치아에 손상을 줄 수 있고 제품 고장의 원인이 될 수 있습니다.

충전 시 주의사항

- 제품 본체 하단에 위치한 충전 LED에 적색이 깜박거리면 충전을 해주십시오.
- 본 제품에는 배터리가 내장되어 있습니다. 높은 온도나 심한 충격을 가하면 배터리 화재 및 폭발의 원인이 될 수 있습니다.
- 제품 규격에 맞는 어댑터를 사용해 주십시오. 규격에 맞지 않는 어댑터 사용은 제품 고장의 원인이 될 수 있습니다.(제품의 정격 입력은 5V / 1A / 5W 입니다.)
- 충전기를 욕조, 세면대 등 물기가 있는 곳에서 사용하지 마시고, 충전 시 USB단자에 물기가 있는지 확인해 주십시오. 충전기에 물기가 달으면 제품 고장 및 화재의 원인이 될 수 있습니다.

세척 및 유지보수 시 주의사항

- 칫솔모 교체 시 동봉 또는 별매로 판매되는 전용 칫솔모를 사용하여 주십시오. 다른 칫솔모는 호환 되지 않습니다.
- 칫솔 사용 후에는 칫솔모를 세척한 뒤 자연 건조하여 주십시오. 치약이 남아있거나 제대로 건조되지 않으면 세균이 번식할 수 있습니다.
- 사용한지 3달이 경과 되거나 칫솔모가 심하게 변형된 경우에는 칫솔모를 교체하여 주십시오.
- 칫솔모 및 칫솔 본체를 소독하기 위해 끓는 물,세제 또는 화학약품에 담그지 마십시오. 제품 고장의 원인이 될 수 있습니다.
- 제품을 사용하지 않을 경우에는 건조하고 선한 곳에 보관하여 주십시오. 고온 다습한 환경은 제품 고장의 원인이 될 수 있습니다.



Disposal English

This product has a built-in battery and electronic components. If batteries and electronic products are not disposed properly, they may cause environmental pollution.

Precautions

Ûser Precautions

- Please use it after fully understanding the usage method and precautions.
- If you have recently had a surgery or any damaged in a teeth, Please using after consulting a specialist.
- If you feel the pain or any inconvenience in your mouth after using the toothbrush, stop using it immediately and consult a specialist.
- Do not allow children to play with it. If used by children under 13 years of age, please use it with any companion
- Do not touch this device to children under 3 years of age. Do not push the toothbrush too hard. It may damage the teeth and cause product failure.

Ûrecautions on charging

- Start the charging after the red flashes on the charging LED located bottom.
- This product has a built-in battery. High temperatures and critical damage can cause fires and explosions.
- Use an adapter that appropriates to product specification. Unsuitable adapters can cause failures. (The rated input of the product is 5V / 1A / 5W.) Please caution the water when using a charger. If the charger gets wet, it may cause product malfunction or fire.

Ûrecautions for managing product

- When replacing a toothbursh head, please use only Sonic toothbrush head. Other toothbrush head are not compatible.
- After using toothbrush, wash and dry it. If there is remaining toothpaste and not dry perfectly, It may increase Bacteria.
- Change the toothbrush head when it using over the 3 months or damaged.
- Do not put in boiling water, detergent or chemicals to disinfect the toothbrush head and toothbrush body. It may cause product malfunction. When the product is not in use, store it in a dry and cool place. A high-temperature and high-humidity environment may cause product failure.

FAQ 한국어

진동 세기가 너무 약해요.

- 칫솔을 세게 눌러 양치질을 한다면 진동이 약해질 수 있습니다. 칫솔을 세게 누르지 마시고, 약하게 접촉하여 사용하여 주십시오.
- 칫솔 헤드를 너무 강하게 장착하면 내부 모터가 망가질 수 있습니다. 칫솔 헤드와 칫솔 본체 사이에 1mm정도의 틈이 있는지 확인하여 주십시오. 없다면 A/S를 요청하십시오.

충전을 해도 작동이 안돼요.

- 출하 시 배터리가 방전되었거나, 전원 ON/OFF 사용 미숙일 수 있습니다. 설명서를 숙지하고 충전 후 사용하십시오. 그래도 작동하지 않는다면 A/S를 요청하십시오.
- 배터리 수명이 다 되었을 수 있습니다. 완충을 시키고 사용하여 주십시오. 충전이 안되거나 완충 시에도 작동이 안된다면 A/S를 요청하십시오.

충전이 잘 안돼요.

- USB 전원단자에 물, 먼지와 같은 이물질이 있다면 접촉 불량일 일어날 수 있습니다. USB 전원 단자를 깨끗하게 청소하고 건조 후 사용 하십시오.
- 무선 충전 거치대와 본체가 접촉하지 않을 수 있습니다. 무선 충전 거치대 속에 이물질이 있는지 확인하시고, 이물질 제거 후에도 충전이 안된다면 A/S를 요청하십시오.

진동이 너무 강해요 / 사용 후 잇몸이 아파요.

- 평소 잇몸이 약하다면 진동이 세게 느껴질 수 있습니다. 강도를 약으로 사용하시거나, 사용을 중단하고 전문의와 상의 후에 사용하십시오.

충전할 때 발열이 너무 심해요.

- 무선충전 특성 상 발열이 어느정도 존재할 수 있습니다. 이상 발열이 발생하면 즉시 충전기의 전원을 차단하고 A/S를 요청하십시오.

작동할 때 이상한 소음이 나요.

- 진동을 이용하는 제품으로, 일정량의 소음이 존재합니다. 이상 소음이 계속 발생한다면 A/S를 요청하십시오.

완충된 칫솔을 계속 충전기에 세워 두어도 괜찮을까요?

- 본 제품에는 과충전 방지회로가 탑재되어 완충 후에는 충전이 종료됩니다. 배터리의 수명을 위하여 가급적 완충 후 충전기와 분리하는 것을 추천 드립니다.

5	6	7	8	9
---	---	---	---	---

FAQ English

The vibration strength is weak.

- If you brush your teeth by pressing the toothbrush hard, the vibration may be weakened. Do not press the toothbrush too hard, but use it soft touch.
- If the toothbrush head is connected too strongly, the internal motor may be damaged. Check that there is a gap of about 1mm between the toothbrush head and body . If not , please contact for customer service center.

It doesn't work even when charging.

- The battery needs to be fully charged for the first time. And the power ON/OFF may be inexperienced. Please read the manual carefully and use it after charging. If it still doesn't work, ask for customer Service centre.
- The toothbrush is may be running out of battery . Please use it after enough charging it. If charging does not work even when charged , request customer service center

Charging is not working well.

- If there are water or dust on the USB connector, contact faulty may occur. Using the USB connector after cleaning and drying.
- The wireless charging cradle and the body may not come into contact. Check if there are any foreign substances in the wireless charging cradle, and if charging does not work even after removing it, request replacement.

The vibration is too strong.

- The vibration may be felt strongly in sensitive and weak areas on the teeth . Use strength as a low mode, or stop using it and take medical attention.

Occur the heat while charging.

- Due to the characteristics of wireless charging, some amount of heat may exist. If heat still occurs, immediately turn off the charger and contact customer service.

There is a strange noise when operating.

- The product that uses vibration, a certain amount of noise exists. If the noise continues to occur, request customer service.

Is it okay to keep a fully charged toothbrush standing on the charger?

- This product that charge finishes after a full charge because there is including prevents overcharging. For the life of the battery, it is recommended to disconnect it from the charger after finishing charge.

5	6	7	8	9
---	---	---	---	---

충전기와 칫솔을 습한 화장실에 두어도 괜찮을까요? 한국어

- 칫솔은 IPX8 방수를 지원하여 괜찮습니다. 하지만 충전기는 방수를 지원하지 않으므로 권장하지 않습니다. 세균 번식 및 곰팡이 방지를 위해 서늘하고 건조한 곳에 보관하는 것을 권장 드립니다.

칫솔 본체를 흐르는 물에 씻어도 괜찮을까요?

- 본 제품은 IPX8 등급의 방수를 지원하므로 가능합니다. 충전기는 방수가 지원되지 않으므로 물 세척을 금합니다.

제품정보

<p>상품명 : SONIQ 모델명 : BSET-001,BSET-02,BSET-03,BSET-04,BSETC-001 재질 : ABS, PC, POM 외 정격입력 : DC 5V, 1A 소비전력 : 2W 모터 진동수 : 30,000/ 분 무선충전 주파수 : 70 Khz ± 10% 배터리 사양 : 3.7V, 1100mAh 방수 등급 : IPX8 크기 : 180 X 28.5 X 27.5 mm(본체) 무게 : 116g</p>
--

제조사 정보

제조회 : 제노스(대한민국)
경기도 수원시 영통구 창릉대로256번길 56, D-factory
Tel. 070-7098-7542 www.genoss.com

A/S 및 제품 문의
무상 A/S 기간은 6개월이며 무상 A/S 기간이더라도 소비자 과실로 인한 수리 사유 시에는 유상으로 전환됩니다.
Tel. 070-7098-7542 Fax. 031-8019-9123

“부작용 보고 관련 문의처(한국의료기기안전정보원, 080-080-4183)”
MS-P2886/PU-DE1901(Rev.2,23.04)

5	6	7	8	9
---	---	---	---	---

FAQ English

Is it okay to leave the charger and toothbrush in a moist place?

- The toothbrush is not damaged because of provides IPX8 waterproof. However, it is not recommended as the charger does not support waterproofing. Store in a cool, dry place as much as possible.

Is it okay to wash the toothbrush body under running water?

- This product is possible because it supports IPX8 waterproof rating. The charger is not waterproof, so do not wash it with water.

Product information

Product name: SONIQ
Model number: BSET-001,BSET-02,BSET-03,BSET-04,BSETC-001
Material: ABS, PC, POM and others
Rated input: DC 5V, 1A
Rated output(Power consumption): 2W
Vibration: 30,000/min
Wireless charging frequency: 70 Khz ± 10%
Batteries: 3.7V, 1100mAh
Waterproof rate: IPX8
Dimensions: 180 X 28.5 X 27.5 mm(body)
Weight: 116g

Manufacturer information

Manufacturer: genoss co.,Ltd.(Korea)
D-factory 56, Changnyong-daero 256beon-gil, Yeongtong-gu, Suwon-si, Gyeonggi-do
Tel. +82-70-7098-7542 www.genoss.com

Customer Service

The warranty period is 6 months , and even during the free warranty period, it is converted to a paid service in case of repair due to consumer negligence.
Tel. +82-70-7098-7542 Fax. +82-31-8019-9123

5	6	7	8	9
---	---	---	---	---